

# Measuring Instructions: Electric Cassette Roller Blinds for Bifolding Doors

Our electric cassette roller blinds for bifolding doors are designed to be fitted **inside the recess** of the door reveal. The blinds are not intended to be screwed into the doors themselves.

The blinds can only be installed on bifolding door recesses where the doors concertina outwards.

## Useful Information & Tips

Use a metal tape measure as cloth ones can be inaccurate.

The overall width of roller blinds including brackets is approximately 40mm wider than the fabric.

Make sure the recess is deep enough taking door handles into account allowing 90mm for the depth of the cassette.

Blinds are produced within an operating tolerance of +/-3mm.

The finished width of a cassette roller blind is 5mm wider than the ordered size once the cassette is added.

## Door Configurations

Bifolding doors come in various configurations, most commonly **3/4/5/6 doors**.

You can decide how many blinds you require for the design of your doors.

**Typical configurations are:**

**3 doors = 3 blinds**






**4 doors = 2 blinds or 4 blinds**

**5 doors = 2+2+1 blinds or 5 blinds**

**6 doors = 2+2+2 blinds**

## Bracket Dimensions

A. System 40® standard metal bracket top fix & 70mm cover.

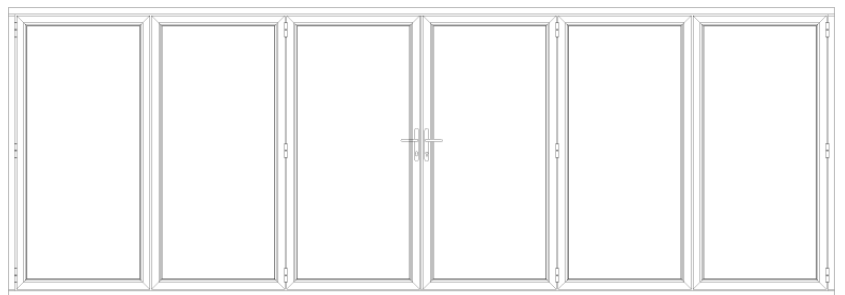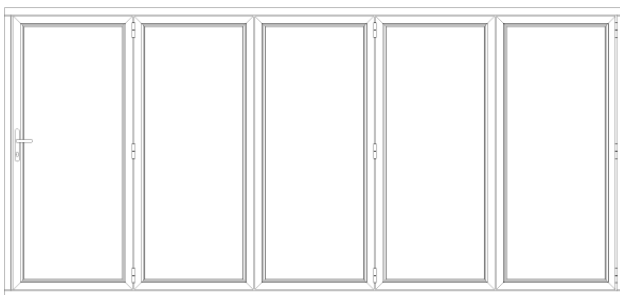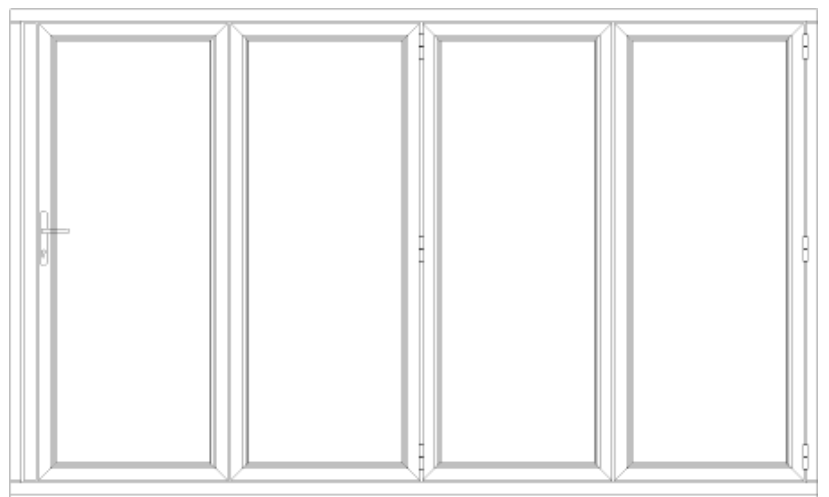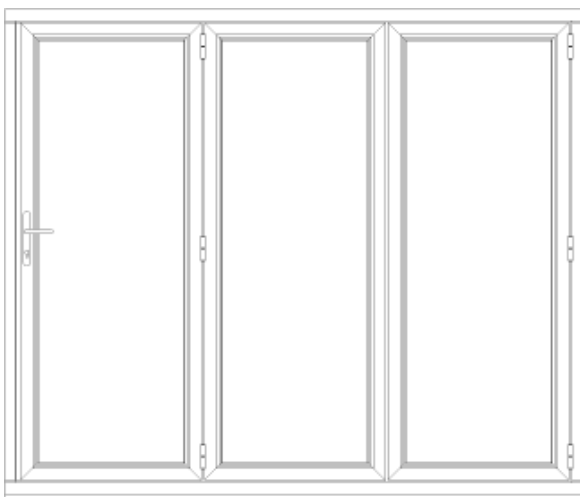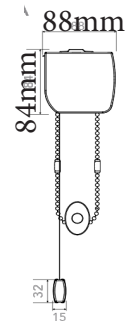

Decide if you want:

a) Blinds of **equal size** to each other to cover the recess space

**or**

b) Blinds of **different sizes** to each other to cover the recess space.

### **a) Equal sized blinds**

#### **Width**

Measure the overall recess space from wall to wall then divide by the number of blinds you require, then **subtract 5mm** from each blind size.

e.g. Overall recess 3500mm with 4 doors. 2 blinds required =  $3500/2 = 1750\text{mm} - 5\text{mm} = 1745\text{mm}$  each blind. Where the two blinds meet there will be a 40mm gap between the fabric on each blind.

#### **Drop**

Measure from the top inside recess where the brackets are fitted to the floor.

Order each blind as **EXACT SIZE**.

### **b) Different sized blinds**

#### **Width**

Use a pencil to place a small mark on the recess where each bracket will be fitted, then measure the size between each mark.

#### **Drop**

Measure from the top inside recess where the brackets are fitted to the floor, do not make any deductions.

Order each blind as **EXACT SIZE**.

Follow the same instructions for all door configurations.

